


# IMPORTANT – INSTALLER


Identify the Pilots on your range and adjust as shown below:

**Oven Pilot adjusting Screw Location:** On pilot filter attached to Manifold pipe, or Control Valve.

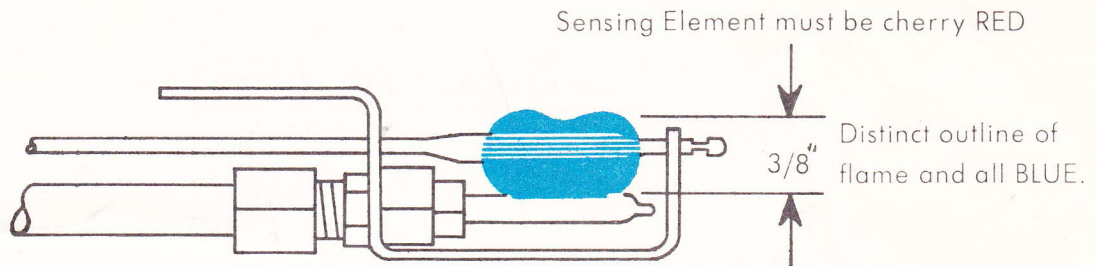


## Top Burner Pilots:

Pilot adjusting screw located on pilot filter attached to manifold pipe beneath cook top.

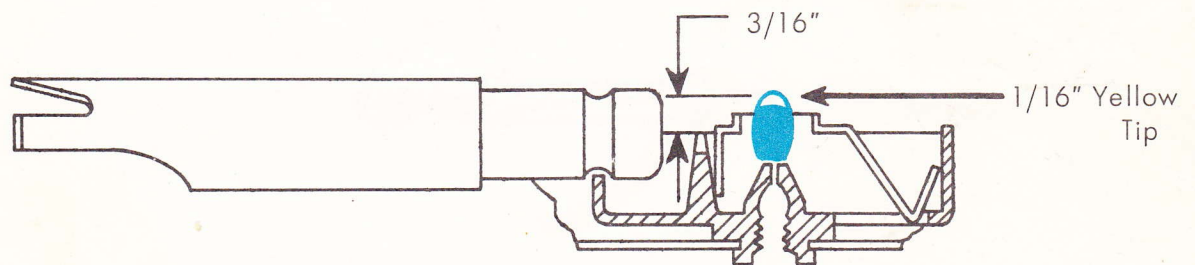

## Top Burners:

INNER CONE FLAME LENGTH			
FRONT BURNER		REAR BURNER	GRIDDLE BURNER
3/4"	FOR NATURAL OR MIXED GAS	5/8"	5/8"
1/2"	FOR MFG. GAS	3/8"	3/8"

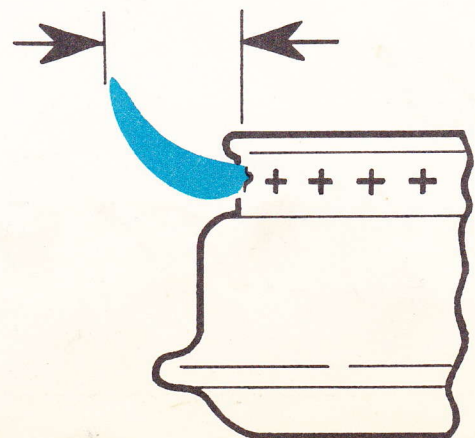


**Identify the Burner on your range and adjust if necessary:**

Some Models are shipped from the factory pre-adjusted for 4" NATURAL GAS. These Models are not approved for use with LP (bottle or tank) Gas until proper parts are obtained and installed.

Other Models are shipped with adjustable orifices set for 7" NATURAL GAS. If range is to be used with LP (bottle or tank) Gas, refer to NAME and NUMBER PLATE and INSTALLATION MANUAL shipped with the range for adjustments.

**Oven Burner**

INNER CONE FLAME LENGTH	
7/8" for Natural or Mixed Gas	9/16" for Mfg. Gas

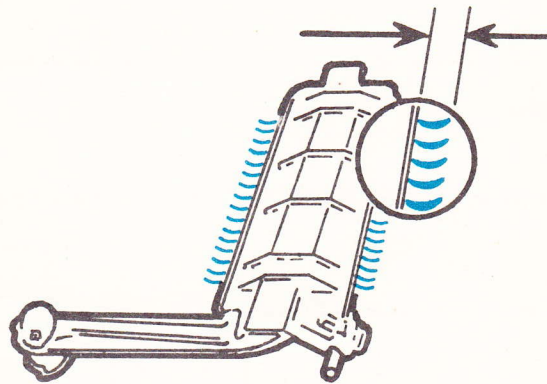

See Installation and Adjustment Manual for more detailed information.